


Power Divider

From the satellite antenna LNB

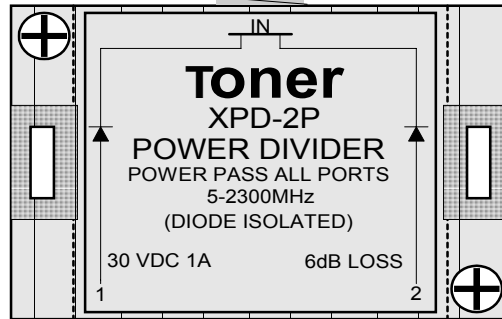

Port 1 goes to the SA
PowerVu 9234 IRD

Port 2 goes to the SA
PowerVu 9235 IRD